

Congratulations

on the purchase of your
new Cordless Sweeper

Felicidades

en la compra de su nueva
barredora inalámbrica

Get charged up and
ready to clean with
a replacement
battery pack

*Cargue sus pilas y
prepárese para
limpiar con una **batería de repuesto***



Visit www.sharkvac.com today to order!

OR CALL US AT 1-800-798-7398 or USE THE FORM BELOW

¡Visite www.sharkvac.com hoy para ordenarla!

O LLÁMENOS AL 1-800-798-7398 o USE EL FORMULARIO QUE APARECE ABAJO

Name/Nombre: _____

Address/Dirección: _____

City/Ciudad: _____

State/Estado: _____ Zip/Código postal: _____

Phone number/Teléfono: (_____) _____

E-mail/Correo electrónico: _____

Credit Card Type (circle one)/Tarjeta de crédito (elija una):

Visa

MasterCard

Amex

Discover

Credit Card #: _____ Exp. Date: _____

de tarjeta de crédito

Fecha de vencimiento

Or make your check/money order payable to **EURO-PRO OPERATING LLC**

O haga su cheque/giro postal a nombre de **EURO-PRO OPERATING LLC**

Description/Descripción	Qty/Cantidad	Price/Precio
Battery Pack/Batería (XB1918)	1	\$19.95
Shipping/Handling/Manejo y envío		\$4.95
TOTAL		\$24.90

Add applicable sales tax for AL, CA, MA, MI, NY.

Agregue los impuestos sobre la venta aplicables para AL, CA, MA, MI, NY.

Mail this form along
with payment to:

*Envíe este formulario
junto con su pago a:*

**Shark Sweeper Batteries
15820 Euclid Ave.
Chino, CA 91708**

IMPORTANT



**Cordless
Barredora**

Model
7.2 Volts

To Maximize the life of your battery:

1. **Charge for a minimum of 12 hours.**
Failure to do so will significantly reduce the life of the battery.
2. Do not store unit without being fully charged and plugged in.
3. Only recharge when the battery is fully charged (or as close to fully charged as possible).
4. Do not store in areas that are extremely hot or cold.
5. After 3 months of non-use, the battery should be fully charged and then discharged and then recharged to full power.
6. Use only the charger that is supplied with the battery, product or charger.

NiCd batteries have a limited life span and will need to be replaced. Please call Customer service at 1-800-798-7398 for more information.

- Note:**
1. The On/Off switch must be in the "On" position in order to charge the battery. If the switch does not light up, the battery is not charging.
 2. If the product is stored for an extended period of time, it will take several full charge/discharge cycles to reach full power.

**EURO-PRO Operating LLC
Boston, MA 02465
Tel. : 1 (800) 798-7398
Copyright © EURO-PRO OPERATING LLC**

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING YOUR CORDLESS SWEEPER.


When using an electrical appliance, basic safety precautions should always be observed, including the following:

WARNING: To reduce the risk of fire, electrical shock, or injury:

1. **Do not** charge this unit outdoors.
2. **Do not** use outdoors or on wet surfaces.
3. **Do not** allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. **Do not** use with damaged cord or plug. Do not use cordless sweeper if it has been dropped, damaged, left outdoors, or dropped in water. Return it to **EURO-PRO Operating LLC** for examination, repair or adjustment.
6. **Do not** abuse the charger cord. Never carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect.
7. Keep charger cord away from heated surfaces.
8. This product includes rechargeable nickel cadmium batteries. Batteries must be recycled or disposed of properly. **Do not incinerate batteries or expose to high temperatures**, as they may explode.
9. **Do not** handle plug or appliance with wet hands.
10. **Do not** put any object into openings. **Do not** use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. **Do not** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. **Do not** attempt to change accessories while unit is running.
14. Use extra care when cleaning on stairs.
15. **Do not** use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Read and follow all label, operational and marking instructions.
17. **Do not** use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (120V., 60Hz) electrical outlet.
18. **Do not use the cordless sweeper without dust container in place.**
19. Store the cordless sweeper indoors. Store after use to prevent accidents.
20. Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin – wash immediately with soap and water or neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
21. Use only on dry, indoor surfaces.
22. **Do not** use for any purpose other than described in this user's guide.
23. **Do not** attempt to use the charger with any other product or attempt to charge this product with another charger. **Use only charger model Kuantech KA12D120015023U supplied with this appliance.**
24. The appliance must be disconnected from the supply when removing the battery.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

1. Handle Release
2. Upper Handle
3. Folding Pivot
4. No Touch Empty Button
5. Charging Light Indicator
6. On/Off Switch
7. Charging Adapter: Only Use Kuantech KA12D120015023U
8. Charging Jack
9. Transparent Brush Cover
10. Rotating Brush
11. Edging Tool
12. Gear Box
13. Sweeper Power Head
14. Dust Cup Container
15. Speed Indicator Lights
16. Speed Control
17. Dust Container Release Lever

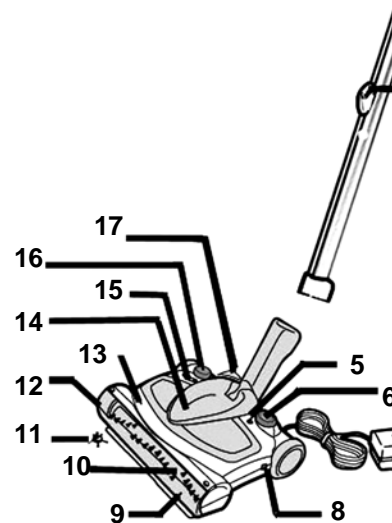

* Illustrations may differ from actual product.

NOTE: The cordless sweeper is shipped with a fully charged battery. Charging of the unit for 20 hours will fully charge the battery. Use replacement battery # XB19.

Assembling Your Cordless Sweeper

Your cordless sweeper will require very little assembly. You should remove it from the carton and familiarize yourself with all the components listed per the exploded view drawing. (Pg. 2) This will help you in the assembly and operation of your cordless sweeper.

Note: The charging adapter will be shipped inside the packaging.

1. To assemble your sweeper, push the handle into the base. It will snap into place firmly. (Fig. 1)



Fig. 1



Fig. 2


2. To straighten the handle, simply lift the upper handle. The forward folding pivot will click into the straightened position as shown in Figure 2.
3. To fold the handle, press on the handle release button firmly while bending the handle forward. The forward folding pivot will click into the bent position as shown in Figure 3.



Fig. 3

Charging Instructions

1. Connect the charger plug to the charging port. Plug the charging adapter into the wall outlet. (Fig. 4)

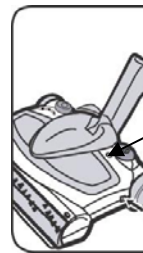

2. This cordless sweeper is powered by Ni-Cd batteries. It should be charged for a minimum 20 hours.

Important: After initial charging, your new cordless sweeper should be connected to the charging adapter for a period of 24 hours. The manufacturing cycle is approximately 12 hours. The manufacturer recommends that the cordless sweeper, the unit be allowed to charge fully, then be disconnected from the charging adapter. The unit should be unplugged from the wall receptacle and stored in a cool, dry place.

3. When recharging the unit, the "On/Off" switch should be in the "On" position.
4. The charging light indicator on the top of the unit should illuminate, indicating that the sweeper is properly charging.
5. To recharge, repeat step #1 above. Charge for 20 hours between charging cycles.

Note: If, when you place the sweeper to recharge, the charging indicator light does NOT illuminate, then press the On/Off button. The charging indicator light should now light up.

Note: Peak performance may only be realized if the unit is fully recharged two (2) or three (3) times.

Important: To maintain peak performance of the unit, it is recommended that the unit be fully discharged once a month.

Caution:

- Use only the adaptor supplied with the sweeper.
- **Do not** clean the sweeper while unit is charging.
- **Do not** attempt to remove the battery pack while charging.
- **Never** attempt to throw the battery pack or the unit.
- **Do not** attempt to remove or damage the unit.

Preview Limit Reached! To view more of this manual,
please visit:

[**http://freemanualdownload.com/Shark-V1950Q-free-manual-download**](http://freemanualdownload.com/Shark-V1950Q-free-manual-download)